

Warning: Before installing your control and automatic Shutdown software, please make sure that you UPS is connected to your computer through the RS232 (9 pins) cable included in the UPS box.

WinPower installation:

Insert the CD provided with your UPS in your CD/DVD reader. Installation process should start automatically. If it does not, click on "Start" and choose "Execute". Type «D:\Setup.exe» and click on the «OK» button.

-OR-

After downloading Winpower from UNITEK web site (www.unitek-power.com), launch the file called « Winpower_Setup_XXX» (where « XXX » is the name of your operating system).

When the install window appears, follow these instructions:

- Click on the «Next» button
- Type the hereunder serial number in the field called «Enter the Serial Number Here:» then click on the «Next» button

511C1-01220-0100-478DF2A

- Click on the "Next" button again, then on the "Install" button. Installation process starts.
- When installation ends a new screen appears. Click on the "Done" button to finish installation.

WinPower quick start:

1. Click «Start > Programs > Winpower > Winpower». A green electrical plug icon should appear in the task bar. Click on this icon with the mouse right button and choose «Start Monitor» in the menu. A loading windows should appear and be replaced a few seconds later by WinPower's interface

2. For the moment WinPower is in "Read only" mode (as indicated in the title bar), its settings can't be modified. To changed the default settings you must get in "Administrator mode": Click on the "System" menu and select "Act as administrator". You will be asked for a password. By default it is "Administrator" (case sensitive). You will be able to change it later. You will notice that in "Administrator mode" the title bar does not display "(Read)" anymore.

3. Click on the "System" menu and select «Auto Search UPS» to start the automatic detection of your UPS by your computer.

4. To monitor your UPS, you now have to locate it in the connection tree on the left of WinPower's window by clicking on the relevant "handles" (🔍)

5. You can now modify the behaviour of you UPS by using the menu "UPS > Shutdown Parameter".

